

PowerKey Pro

Part Number Ordering Guide

| Keypad Series | | | Model Number | | | Software | | Accessories | | | H/W | Internal Use | | |
|-------------------------|----------|----------|-------------------------------|--------------------------------|---------------------------------|--|--|--|-------------------------|--|-----|--------------|----------|----------|
| P | K | P | | | 0 | 0 | | | | | | 0 | 0 | 0 |
| Keypad Series | Rows | Columns | Description | Network Communication Protocol | Configuration | Software Revision (Internal Use Only) | Button | Connector Style | Bezel | Hardware Revision (Internal Use Only) | | | | |
| PKP PowerKey Pro | 0 | 5 | 0500 - Five Position Keypad | 0 CAN & RS485 | 0 Standard Configuration | Software revision will be a letter between A - Z | 0 Relegendable Buttons, No Inserts Installed | 0 None, Flying Leads | 0 None Installed | Hardware revision will be a letter between A - Z | | | | |
| | 1 | 4 | 1400 - Four Position Keypad | 1 RS485 | 1 Custom Configuration | | 1 Laser-etched Removable Insert | 1 Harness with Deutsch Connector | 1 Neutral | | | | | |
| | 1 | 5 | 1500 - Five Position Keypad | 2 J1939 | 2 Demonstration Software | | 2 Clear Removable Insert | 2 Harness with Molex Connector | 2 Black | | | | | |
| | 2 | 2 | 2200 - Four Position Keypad | 3 NMEA2000 ² | 3 Other | | 3 Laser-etchable Solid Black Removable Insert | 3 Harness with Micro-C Connector ² | 3 Wood Grain | | | | | |
| | 2 | 3 | 2300 - Six Position Keypad | 4 CAN Open | | | 4 Pad-printed Removable Insert | 4 Other | 4 Other | | | | | |
| | 2 | 4 | 2400 - Eight Position Keypad | 5 Smartcraft | | | 5 Laser-etched Rubber | | | | | | | |
| | 2 | 6 | 2600 - Twelve Position Keypad | 6 RVC | | | 6 Other | | | | | | | |
| | 3 | 4 | 3400 - Twelve Position Keypad | 7 Other | | | | | | | | | | |

Notes:

1. Reference drawings for dimensions
2. Keypads with NMEA2000 communication protocol are only available with a Micro-C connector
3. Reference the PowerKey Pro Programmers Manual for configuration options
4. Reference the Accessories Catalogue for inserts and bezels
5. Select a number from 1-4 to order a keypad with the bezel installed; enter a 0 if bezels will be ordered separately
6. The last 3 digits of the part number are for internal use only; 000 indicates there are no special features

Example:

Part Number: PKP-2400-20A-000-A-000

Description:

- PowerKey Pro Keypad
- 8 Positions / Buttons, 2 Rows x 4 Columns
- J1939 Communications Protocol
- Standard Configuration
- Standard Relegendable Buttons
- No Inserts Installed
- 4.5 inch Flying Leads
- No Connector Installed
- No Bezel Installed